

## INSTALL INSTRUCTIONS FOR NVMS 2.0 AI

1. Install ONE Client from the list AND the Server program.

Name ↑	Owner
OLD	ENS Security
<b>1</b> NVMS Standard Client Ver2.1.1.01105.exe	ENS Security
NVMS Standard Client x64 Ver2.1.1.01105.exe	ENS Security
<b>2</b> NVMS Standard Server Ver2.1.1.01106(Disable time syn func...	ENS Security
README	ENS Security

2. Once BOTH programs are installed, make sure Server Client is open, and then open Monitor Client.

3. Monitor Client will now prompt you for login credentials. The default is:  
**Username = admin || Password = 123456 || Authentication Server = 127.0.0.1 || Port = 6003**

The screenshot shows a 'Login' dialog box with the following fields and options:

- User Name: admin
- Password: [masked]
- Authentication Server: 127.0.0.1
- Port: 6003
- Remember Password
- Auto Login
- Buttons: Login, Cancel, Reset password